

QUICK START GUIDE



Index

Package content	3
Device Overview	4
Charge your Orbic AirSurf 5G PC	5
SIM Card Replacement	6
Software Update management	7
Windows 10	7
Features	9
Technical datasheet	10
Use Orbic standard safety information	12
Support & More	13

Package Content

Verify that the following items are included in the package:



1X Orbic AirSurf 5G PC
1X Power Adapter
1X Quick Start Guide
1X SIM tool

If any of the items are missing or damaged, please contact manufacturer immediately and save the entire package for transport.

Device Overview


Thank you for purchasing Orbic AirSurf 5G








Charge Your Orbic AirSurf 5G PC

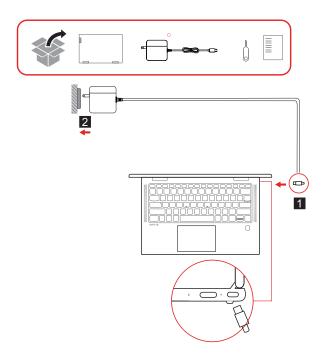

SIM Card Replacement

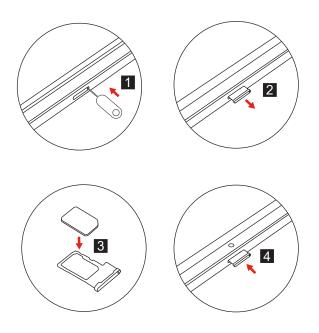

Software Update Management

During software updates or during download operations do not remove the power supply as it may cause irreversible data loss. Any tampering with the software may generate additional costs for recovery.

Windows 10

Start

Press and release the power button for 1 second. (Note: if there is no response when you press the power button, the device battery may need to be charged).

Power OFF / Reboot

From the Start screen, press the Power button > Sleep/Shut Down/Restart

Lock the Screen

Press the power button.

Network Connection

Your Orbic AirSurf 5G PC has built in support for mobile broadband service on 5G and 4G networks. This capability gives you the power to access the internet, send email, or connect to your corporate network without the need for Wi-Fi network or the use of a Wi-Fi hotspot.

Cellular service is provided using a relevant activated SIM card that is inserted on the left side of the computer.

To connect to the mobile network find the task bar:

- Select the network status icon.
- 2. Select Network & Internet settings.
- 3. Under the Network & Internet section, select Cellular, and then select Advanced Options.
- 4. Select the Mobile network you have service with to connect.

Wi-Fi Connection

Select the network icon on the taskbar, select the desired Wi-Fi network.

Bluetooth 5.1

Using your Orbic Airsurf 5G PC bluetooth capability, you can connect all your wireless devices seamlessly.

Changing the Language of the System

From Settings go to Date/Time and language > Region/Language.

Start Menu

Activating the start menu at the bottom left, you will find the quick links to File Explorer, Settings, Stop (Suspend, Stop System, Restart System), all Apps.

The applications you use more often appear in the upper left corner. The tiles (live tiles) that appear on the right side of the start menu act as quick links to the applications. You can reorganize, resize, add and remove tiles whenever you want.

Features

Display

Large 14.1 inch FHD display.

Memory

16 GB of RAM and 256 GB of ROM.

Jack Audio 3.5 mm

Connect headphones or earphones through this output.

Camera

The 2MP built-in camera lets you take photos and videos along with video calling support.

Microphone

It captures your voice and the surrounding incoming sounds.

Speaker

It offers a clear and optimal quality of sound.

Technical Datasheet

Dimensions



Width: 324 mm | Height: 222 mm |Thickness: 18.1 mm |

Weight: 54.1 OZ

Chip



Intel i3, 10110U, 2.1 GHz Modem Qualcomm X55 to 64 bit operating up to 2.60 GHz

Graphics



Intel® UHD Graphics 600 operating up to 650 MHz

Display





Touchscreen14.1" FHD Resolution 1920 x 1080 FHD

Keyboard



Keyboard with touchpad multi touch

Operating System



Windows 10 Home

Memory



RAM LPDDR4 16 GB Storage capacity 256 GB eMMC

Inputs | Outputs











1 Port **USB 3.0**

1 Port USB Type-C full function

1 Port USB Type-C

1 Earphone output 3.5 mm

Battery



Lithium polymer battery:

Dual Cell 6000 mAh 7.6 V

Connection





· Wi-Fi 802.11a/b/g/n/ac/ax **Dual Band**

· Bluetooth 5.1

Camera | Audio



· Audio: 2 integrated speakers

· Camera: 2MP Front

Use Orbic Standard Safety Information



EXPLOSION HAZARD if the battery is replaced with a noncompliant model. Dispose of used batteries according to the manufacturer's instructions.



DO NOT THROW the battery in municipal waste bins. The X symbol on the disposal bin indicates that the battery should not be thrown in the bins of municipal waste.



DO NOT THROW your Orbic AirSurf 5G PC in municipal waste bins. This product has been designed to enable the reuse of some parts and the recycling of other parts. The X symbol on the disposal bin indicates that the product (electrical, electronic, batteries containing mercury) should not be thrown in the bins of municipal waste. Check local regulations for proper disposal of electronic products.



DO NOT THROW your Orbic AirSurf 5G PC in the fire. DO NOT create a short circuit between the contacts. DO NOT disassemble your product.

Support & More



Get help for your device, visit "verizonwireless.com/support."



International travel For features and rates when outside the US, visit "verizonwireless.com/international."



Customer service Call 1.800.922.0204 Twitter@VZWSupport



More Information Download a User Guide from "verizonwireless.com/support

Additional Information

Your Wireless Device and Third-party Services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application,

