

Orbic Q10 RC609L disassembly guide

Notes on Assembly and Disassembly

Thank you for buying an Orbic Q10 mobile phone, This product is designed to give you years of quality trouble free performance, if in the unlikely event your device does not function as required and needs servicing, we strongly recommend that you contact us at Orbic in regards to getting your device repaired both in and out of warranty.


If you wish to repair your own device whilst under the warranty period, and damage is caused as a result of the repair, it will void any warranty claims being honored.

We recommends any self repairs made on the Orbic Q10 is done by a competent person with an understanding of electronics with appropriate ESD and moisture protected work environment.

ORBIC Q10 ID



EXPLODED DRAWING

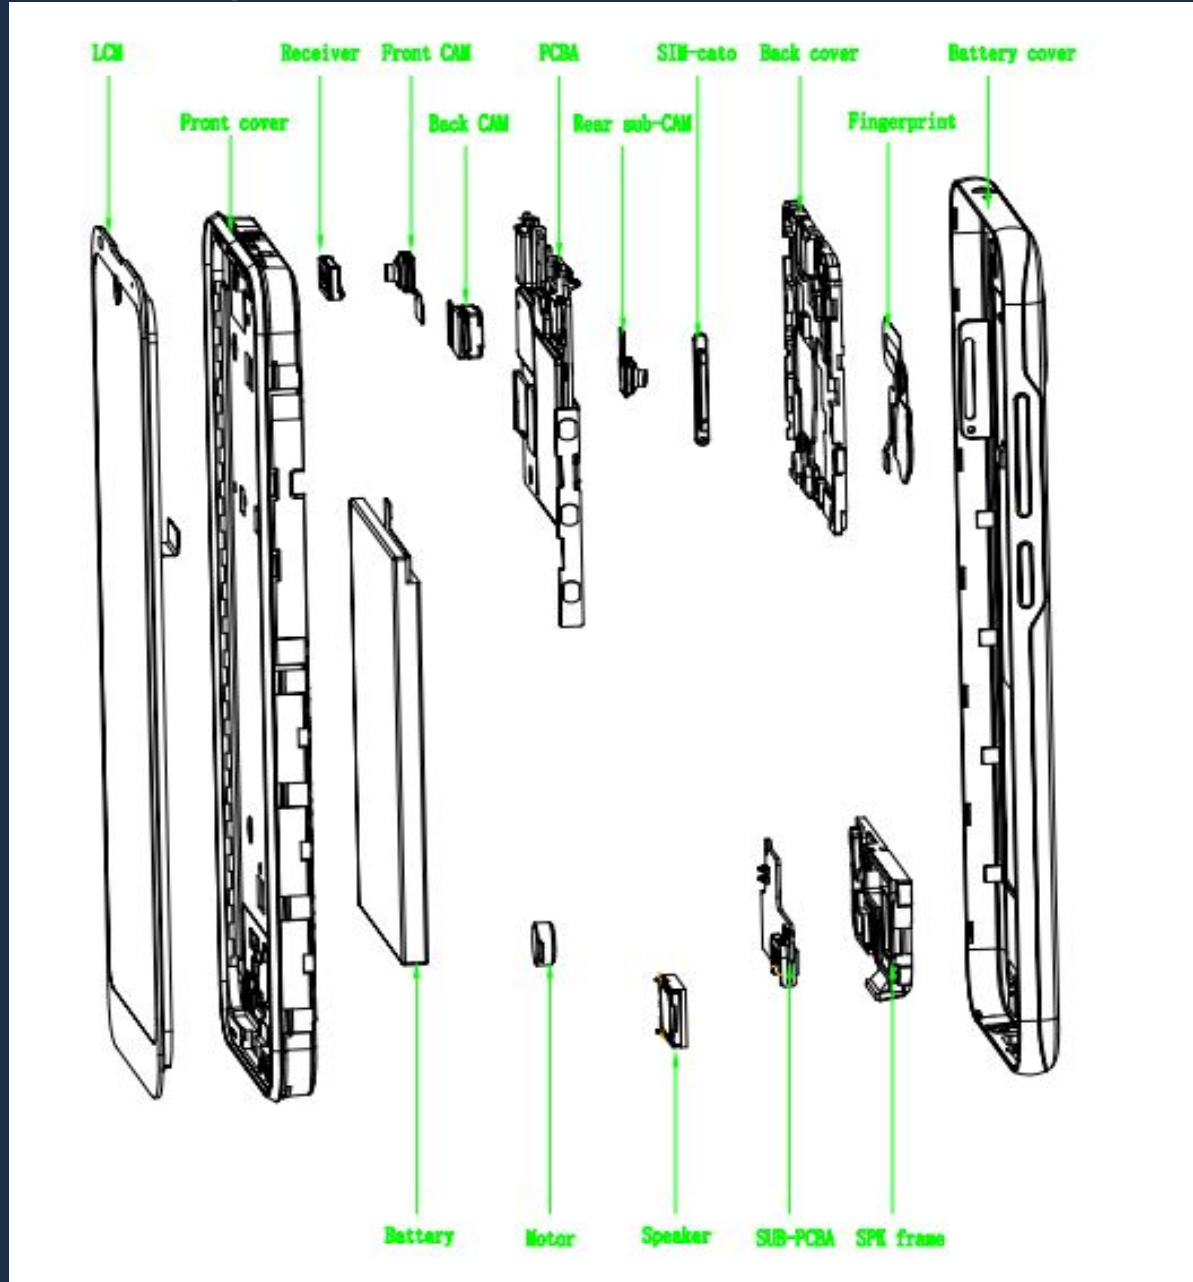



**Remove the Sim card tray
with the card pin**




**Remove the two T3
screws at the bottom**



Starting from the bottom, loosen the button of the battery cover, and then remove the battery cover



**Loosen the fingerprint
module connector**

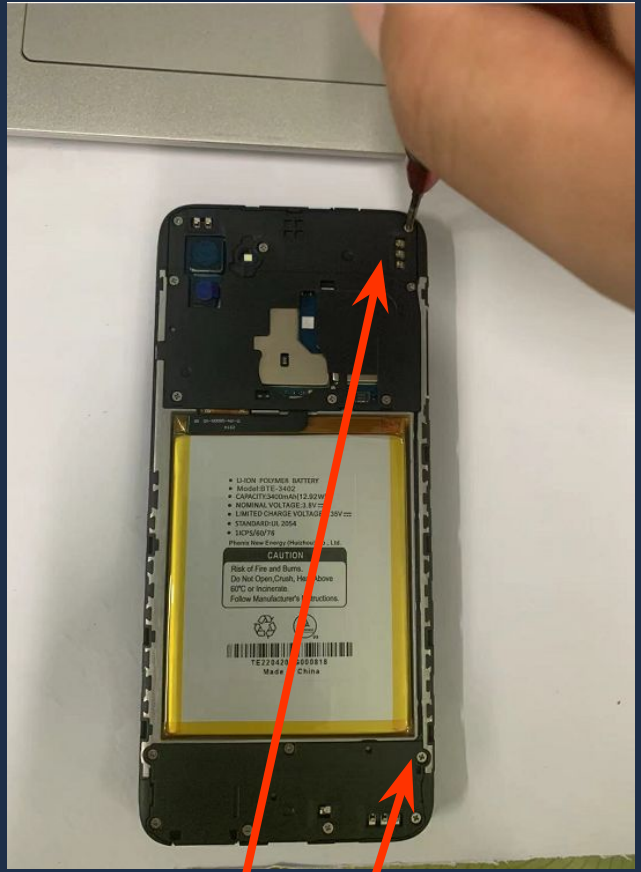

Loosen 15 body screws



Disassemble the bottom case and speaker bracket




Loosen the three connectors and side key FPC




Loosen the terminals at both ends of the coaxial cable



Remove the small board (mobile phone SUB board PCBA)

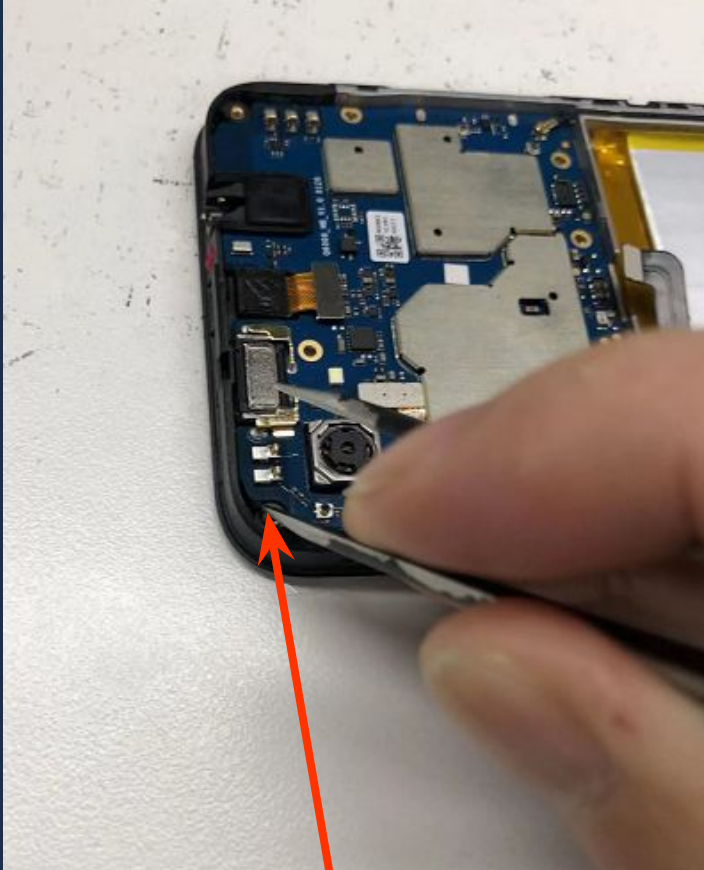

Use tweezers to push the indication on the side of the motherboard to trip the motherboard

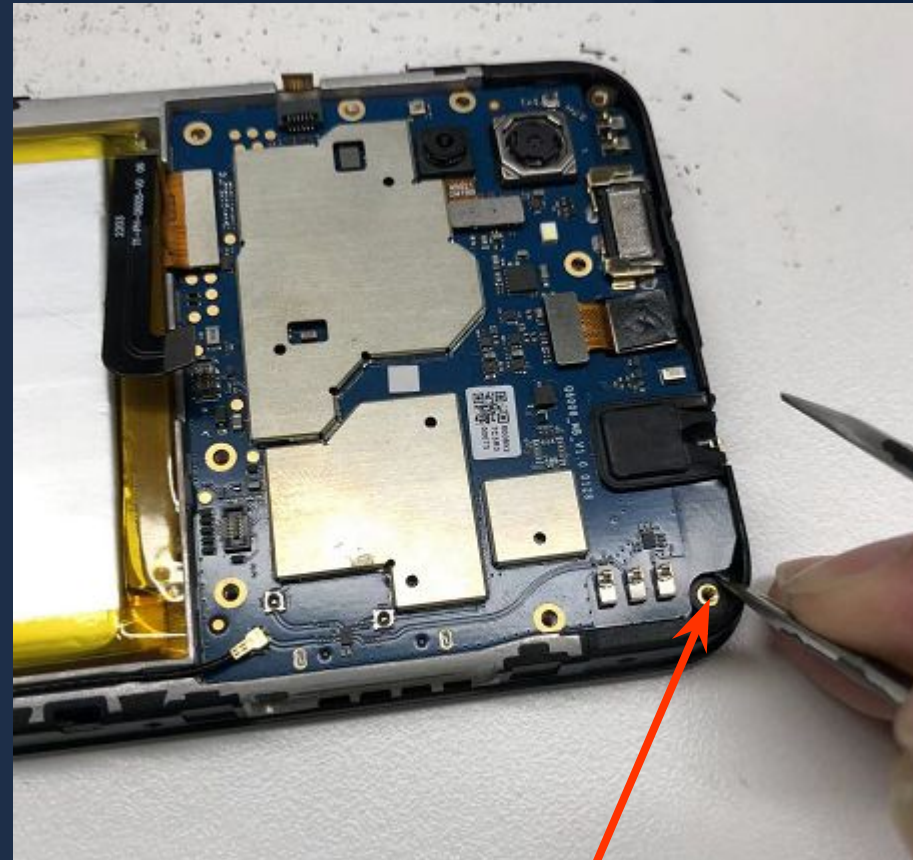

Use tweezers to push the indication on the other side of the motherboard to trip the motherboard



Remove the motherboard after the two motherboard buckles are released



THANK YOU